 
 
 
 
 
 
 
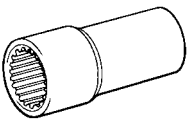 
 
 


TRANSFER

 
 
 
 
 
 
 
 
PREPARATION

 
 
SST

021DT-01

 
 
 
	09023-38200	Union Nut Wrench 12mm	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	09223-00010	Cover & Seal Replacer	TRANSFER ASSY(U341F)
	09308-00010	Oil Seal Puller	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F) TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(U341F)
	09316-60011	Transmission & Transfer Bearing Replacer	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	(09316-00011)	Replacer Pipe	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	09325-20010	Transmission Oil Plug	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(U341F)
	09326-20011	Output Shaft Bearing Lock Nut Wrench	TRANSFER ASSY(U341F)
	09504-22011	Differential Side Bearing Replacer	TRANSFER ASSY(U341F)
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	TRANSFER ASSY(U341F)
	09556-16030	Differential Drive Pinion Holding Tool 28	TRANSFER ASSY(U341F)
	09628-62011	Boll Joint Puller	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	09670-00010	Front Crossmember Guide Tool	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)

PREPARATION – TRANSFER

 
 
 
 
 
	09726-40010 Lower Control Shaft Bearing Replacer	TRANSFER ASSY(U341F)
	09843-18030 Tacho-pulse Pickup Wire No.2	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	09843-18040 Diagnosis Check Wire No.2	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	09930-00010 Drive Shaft Nut Chisel	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	09950-00020 Bearing Remover	TRANSFER ASSY(U341F)
	09950-40011 Puller B Set	TRANSFER ASSY(U341F)
	(09951-04010) Hanger 150	TRANSFER ASSY(U341F)
	(09952-04010) Slide Arm	TRANSFER ASSY(U341F)
	(09953-04020) Center Bolt 150	TRANSFER ASSY(U341F)
	(09954-04010) Arm 25	TRANSFER ASSY(U341F)
	(09955-04061) Claw No.6	TRANSFER ASSY(U341F)
	(09957-04010) Attachment	TRANSFER ASSY(U341F)
	(09958-04011) Holder	TRANSFER ASSY(U341F)

	09950-60010 Replacer Set	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	(09951-00360) Replacer 36	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	(09951-00380) Replacer 38	TRANSFER ASSY(U341F)
	(09951-00400) Replacer 40	TRANSFER ASSY(U341F)
	(09951-00420) Replacer 42	TRANSFER ASSY(U341F)
	(09951-00450) Replacer 45	TRANSFER ASSY(U341F)
	(09951-00580) Replacer 58	TRANSFER ASSY(U341F)
	(09951-00590) Replacer 59	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	(09951-00610) Replacer 61	TRANSFER ASSY(U341F)
	(09951-00620) Replacer 62	TRANSFER ASSY(U341F)
	(09951-00640) Replacer 64	TRANSFER ASSY(U341F)
	(09951-00650) Replacer 65	TRANSFER ASSY(U341F)
	(09952-06010) Adapter	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)

PREPARATION – TRANSFER

	09950-60020 Replacer Set No.2	TRANSFER ASSY(U341F)
	(09951-00680) Replacer 68	TRANSFER ASSY(U341F)
	09950-70010 Handle Set	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	(09951-07150) Handle 150	TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	(09951-07200) Handle 200	TRANSFER ASSY(U341F)

Recommended Tools

	09011-12301 Socket Wrench 30 mm	TRANSFER CASE RH OIL SEAL(U341F)
	09040-00011 Hexagon Wrench Set	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	(09043-20050) Socket Hexagon Wrench 5	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)
	(09043-20060) Socket Hexagon Wrench 6	TRANSFER EXTENSION HOUSING TYPE T OIL SEAL(U341F)
	(09043-20100) Socket Hexagon Wrench 10	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F) TRANSFER CASE RH OIL SEAL(U341F)
	09090-04020 Engine Sling Device	TRANSFER CASE OIL SEAL(U341F) TRANSFER ASSY(U341F)

Equipment

Dial indicator with magnetic base	
CO/HC meter	
Radiator cap tester	
Thermometer	
Tire pressure gauge	
Alignment tester	
Toe-in gauge	
Torque wrench	
Plastic hammer	
Straight edge	
Slide calipers	
V-block	

Lubricant

Transfer oil	0.8 liters (0.84 US qts, 0.70 Imp. qts)	API GL-5 SAE 90
--------------	---	--------------------

SSM (Special Service Materials)

08826-00090	"Seal Packing 1281," THREE BOND 1281 or equivalent (FIPG)	
-------------	---	--