

<b>DTC</b>	<b>P0121</b>	<b>THROTTLE/PEDAL POSITION SENSOR/SWITCH "A" CIRCUIT RANGE/PERFORMANCE PROBLEM</b>
------------	--------------	--

**CIRCUIT DESCRIPTION**

Refer to DTC P0120 on page 05-190.

DTC No.	DTC Detecting Condition	Trouble Area
P0121	After vehicle speed has been exceeded 30 km/h (19 mph) even once, output value of throttle position sensor is out of applicable range for vehicle speed is more than 0 km/h (0 mph). (2 trip detection logic)	<ul style="list-style-type: none"> <li>• Throttle position sensor</li> </ul>

**INSPECTION PROCEDURE**

HINT:

Read freeze frame data using the hand-held tester or OBD II scan tool, as freeze frame data records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

<b>1</b>	<b>ARE THERE ANY DTC BEING OUTPUT(BESIDES P0121)</b>
----------	--

**Result:**

	A	B
RESULT	Only P0121 is output.	P0121 and other codes are output.

<b>B</b>	<b>GO TO RELEVANT DTC CHART</b>
----------	---------------------------------

<b>A</b>
----------

<b>REPLACE E.F.I. THROTTLE POSITION SENSOR</b>
--