

<b>DTC</b>	<b>P1335</b>	<b>CRANKSHAFT POSITION SENSOR CIRCUIT MALFUNCTION (DURING ENGINE RUNNING)</b>
------------	--------------	---

## CIRCUIT DESCRIPTION

Refer to DTC P0335 on page [05-228](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1335	If conditions (a) through (c) are met: (a) NE $\geq$ 1,000 rpm (b) NE signal is not detected for over 50 msec. (c) Not during cranking	<ul style="list-style-type: none"> <li>• Open or short in crankshaft position sensor circuit</li> <li>• Crankshaft position sensor</li> <li>• Crank angle sensor plate</li> <li>• ECM</li> </ul>

## WIRING DIAGRAM

Refer to DTC P0335 on page [05-228](#).

## INSPECTION PROCEDURE

Refer to DTC P0335 on page [05-228](#).