
## STABILIZER BAR REAR (FF) REPLACEMENT


HINT:

COMPONENTS: See page 27-2

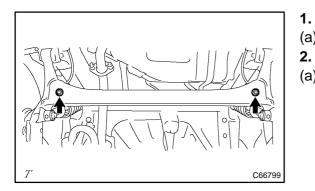

## REMOVE STABILIZER BAR REAR

- (a) Remove the 2 bolts, nuts and stabilizer bar rear.
- 2. INSTALL STABILIZER BAR REAR
- Install the 2 bolts, nuts and stabilizer bar rear.
  Torque: 195 N·m (1,988 kgf·cm, 144 ft·lbf)

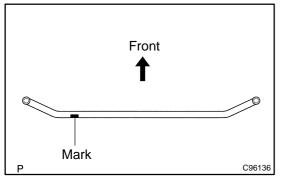

## HINT:

Install the stabilizer bar rear so that the mark is positioned on the rear left side of the vehicle.

27086-01