


# FRONT AXLE LH HUB BOLT REPLACEMENT

300A5-03

HINT:


COMPONENTS: See page 30-55

1. REMOVE FRONT WHEEL
2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH (See page 30-56)
3. REMOVE FRONT DISC

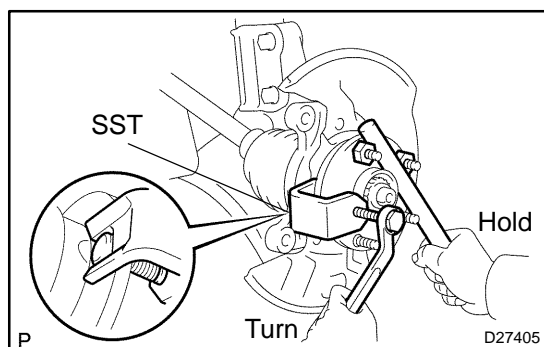

## 4. REMOVE FRONT AXLE LH HUB BOLT

- (a) Using SST and a hammer handle or an equivalent, remove the LH hub bolt.  
SST 09628-10011

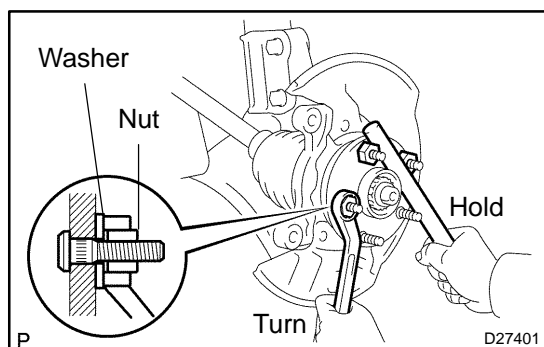

## 5. INSTALL FRONT AXLE LH HUB BOLT

- (a) Install a washer and nut to a new LH hub bolt as shown in the illustration.
- (b) Using a hammer handle or an equivalent to hold the hub sub-assy LH, install the LH hub bolt by tightening the nut.

6. INSTALL FRONT DISC
7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH (See page 30-56)
8. INSTALL FRONT WHEEL  
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)