

DRIVE SHAFT, PROPELLER SHAFT, AXLE

300AY-01

PRECAUTION

1. NOTICE OF REMOVE AND INSTALLING FRONT DRIVE SHAFT ASSY RH

- (a) When removing and installing the front drive shaft assy RH in the 4WD vehicle, drain all the transaxle oil and transfer oil. If the removal and installation is performed without draining these oils, the transfer oil will flow into the transaxle side, which will cause these 2 different oils to be mixed. In this case, cleaning inside the transaxle and the transfer is required.