

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
Wander	6. Wheel	28-1
	7. Front wheel alignment	26-6
	8. Rear wheel alignment	FF: 27-6
		4WD: 27-7
	9. Hub bearing (Worn)	30-3
	10. Front shock absorber	26-10
	11. Rear shock absorber	FF: 27-11
		4WD: 27-7
Front wheel shimmy	1. Wheel (imbalance)	28-1
	2. Hub bearing (Worn)	30-3
	3. Lower suspension arm	26-15
	4. Lower ball joint (Worn)	26-20
	5. Front shock absorber	26-10
Noise (Front)	1. Front drive shaft	1ZZ-FE: 30-15
		2ZZ-FE: 30-32
	2. Front shock absorber	26-10
	3. Hub bearing (Worn)	30-3
	4. Lower ball joint (Worn)	26-20
	Noise (Rear)	1. Rear drive shaft
2. Hub & bearing (Worn)		FF: 30-3
		4WD: 30-3
3. Rear shock absorber		FF: 27-11
	4WD: 27-16	
Vibration or noise (Propeller w/center bearing shaft)	1. Center support bearing	30-6
	2. Propeller and intermediate shafts (Runout)	30-6