

ADJUSTMENT

1. REMOVE REAR WHEEL
2. ADJUST PARKING BRAKE SHOE CLEARANCE
 DRUM REAR BRAKE TYPE (FF) : See page 32-33
 DRUM REAR BRAKE TYPE (4WD) : See page 32-41
 DISC REAR BRAKE TYPE : See page 33-18
3. INSTALL REAR WHEEL
 Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. INSPECT PARKING BRAKE LEVER TRAVEL
 - (a) Pull the parking brake lever to the fully applied position, and count the number of clicks.
Parking brake lever travel: 5 – 8 clicks at 196 N (20 kgf, 44.1 lbf)
5. ADJUST PARKING BRAKE LEVER TRAVEL
 - (a) Remove the rear console box sub-assy (See page 33-4).
 - (b) Loosen the lock nut and turn the adjusting nut until the lever travel turns correct.
 - (c) Tighten the lock nut.
Torque: 5.0 N·m (55 kgf·cm, 44 in·lbf)
 - (d) Install the rear console box sub-assy (See page 33-4).

