


TRANSMISSION WIRE (A246E) REPLACEMENT


400N3-01

1. REMOVE TRANSMISSION VALVE BODY ASSY (See page 40-49)

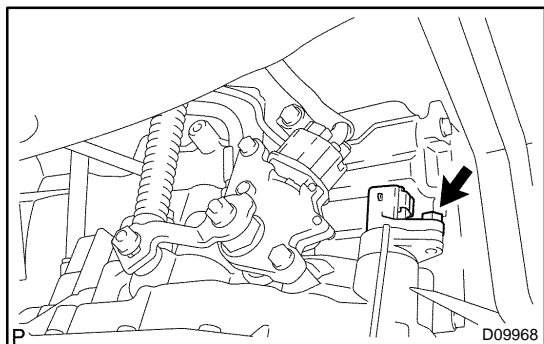

2. REMOVE TRANSMISSION WIRE

- Disconnect the transmission wire connector.
- Removal the bolt and transmission wire.

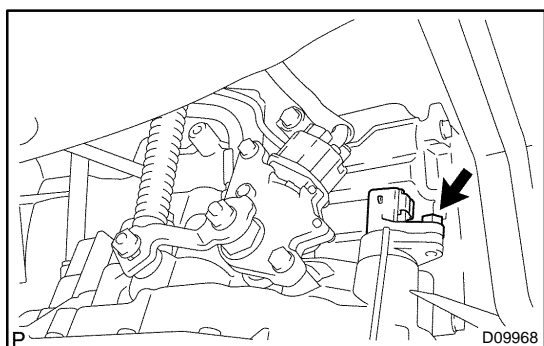

3. INSTALL TRANSMISSION WIRE

- Coat a O-ring with ATF.
- Install the transmission wire and bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- Connect the transmission wire connector.

4. INSTALL TRANSMISSION VALVE BODY ASSY (See page 40-49)