


ADJUSTMENT

1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY

- Apply the parking brake and turn the ignition switch ON.
- Depress the brake pedal and check that the engine starts only when the shift lever is set in N or P position and it does not start in the other position.
- Check that the back-up light comes on and the reverse warning buzzer sounds only when the shift lever is set in R position and these do not function in the other positions.

If a failure is found, check the park/ neutral position switch for continuity.

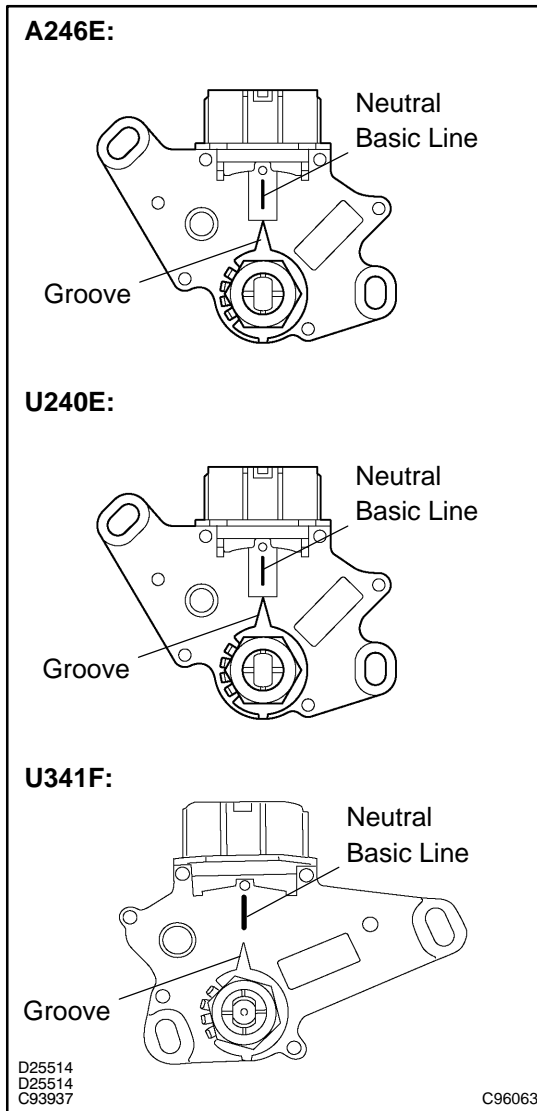

2. ADJUST PARK/NEUTRAL POSITION SWITCH ASSY

- Loosen the 2 bolts of park/ neutral position switch and set the shift lever to the N position.
- Align the groove and neutral basic line.
- Hold the switch in position and tighten the 2 bolts.

Torque:

A246E: 5.5 N·m (56 kgf·cm, 49 in.·lbf)

U240E/U341F: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

- After adjustment, perform the inspection described in step 1.