


TRANSMISSION REVOLUTION SENSOR (U341F)

REPLACEMENT


400MZ-01

1. REMOVE AIR CLEANER ASSEMBLY WITH HOSE

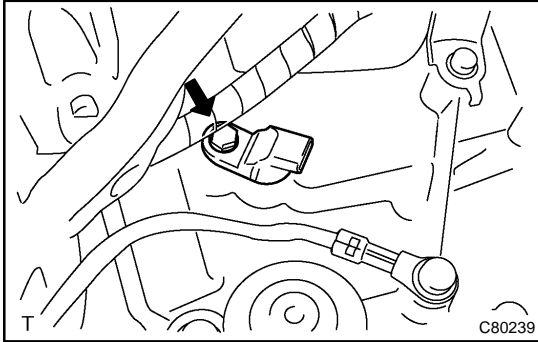

2. REMOVE TRANSMISSION REVOLUTION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and transmission revolution sensor.

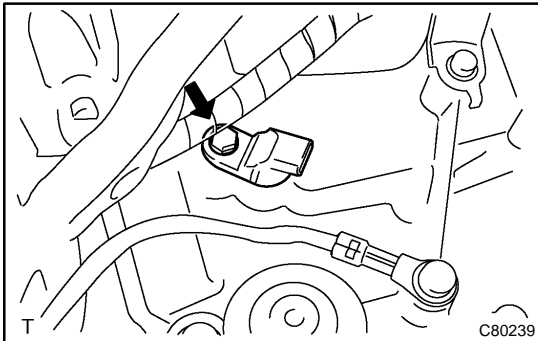

3. INSTALL TRANSMISSION REVOLUTION SENSOR

- (a) Coat O-ring with ATF.
- (b) Install the transmission revolution sensor with the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (c) Connect the connector.

4. INSTALL AIR CLEANER ASSEMBLY WITH HOSE

Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)