

FRONT DIFFERENTIAL OIL SEAL (U341F)

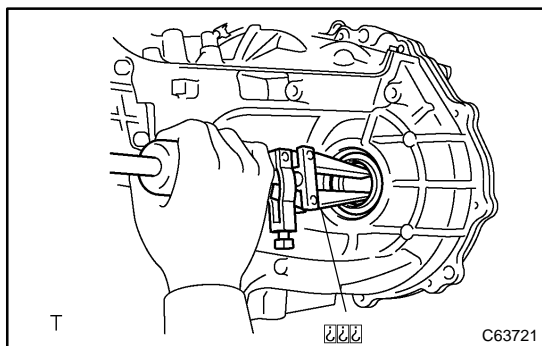
REPLACEMENT

400NB-01

HINT:

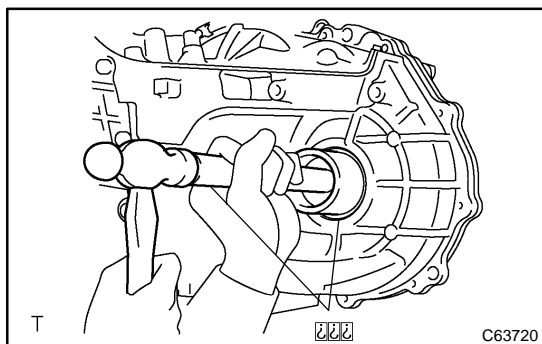
When replacing the front differential oil seal (LH) or (RH), perform step 1 to 13 or 14 to 23 respectively.

1. **REMOVE FRONT WHEELS**
2. **REMOVE ENGINE UNDER COVER LH**
3. **DRAIN AUTOMATIC TRANSAXLE FLUID**
 - (a) Remove the drain plug, gasket and drain ATF.
 - (b) Install a new gasket and drain plug.
Torque: 49 N·m (500 kgf·cm, 36 ft·lbf)
4. **REMOVE FRONT DRIVE SHAFT ASSY LH (See page 30-15)**



5. REMOVE TRANSAXLE CASE OIL SEAL

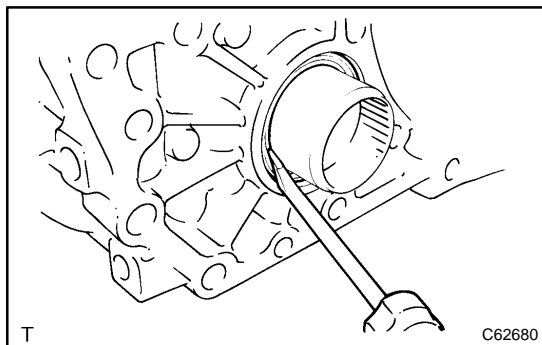
- (a) Using SST, pull out the oil seal.
SST 09308-00010



6. INSTALL TRANSAXLE CASE OIL SEAL

- (a) Using SST and a hammer, drive in a new oil seal.
SST 09726-27012 (09726-02041), 09950-70010
(09951-07200)
Oil seal drive in depth:
2.7 ± 0.5 mm (0.106 ± 0.020 in.)
- (b) Coat the lip of the oil seal with MP grease.

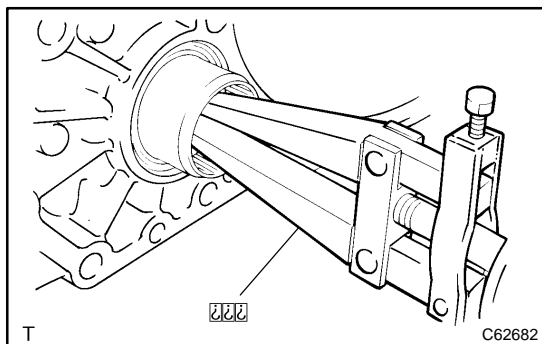
7. **INSTALL FRONT DRIVE SHAFT ASSY LH (See page 30-15)**
8. **INSTALL ENGINE UNDER COVER LH**
9. **INSTALL FRONT WHEELS**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
10. **ADD AUTOMATIC TRANSAXLE FLUID**
11. **INSPECT AUTOMATIC TRANSAXLE FLUID (See page 30-15)**
12. **INSPECT AND ADJUST FRONT WHEEL ALIGNMENT (See page 26-6)**
13. **CHECK ABS SPEED SENSOR SIGNAL (See page 05-316)**
14. **REMOVE ENGINE ASSEMBLY WITH TRANSAXLE (See page 14-30)**
15. **REMOVE FRONT DRIVE SHAFT ASSY RH (See page 30-15)**
16. **REMOVE TRANSFER ASSY (See page 31-11)**

**17. REMOVE FRONT TRANSAXLE CASE OIL SEAL**

- (a) Using a screwdriver, remove the oil seal.

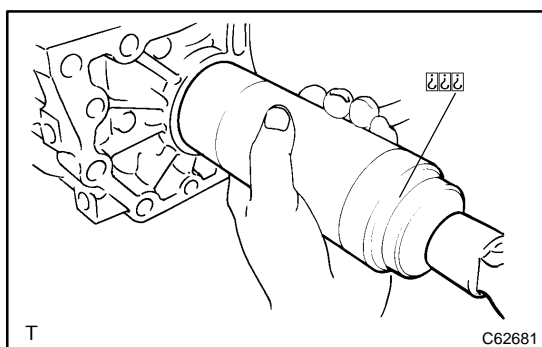
NOTICE:

Be careful not to damage the housing.

**18. REMOVE FRONT DIFFERENTIAL CASE OIL SEAL**

- (a) Using SST, pull out the oil seal.

SST 09308-00010

**19. INSTALL FRONT TRANSAXLE CASE OIL SEAL**

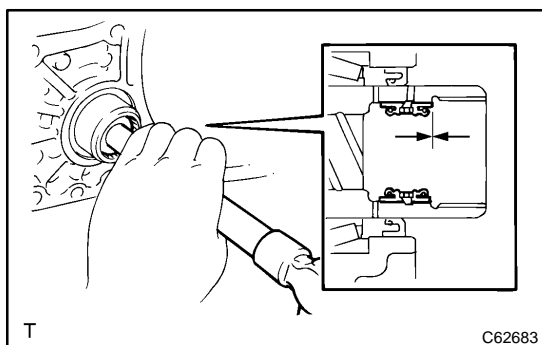
- (a) Using SST and a hammer, drive in a new oil seal.

SST 09309-37010

Oil seal drive in depth:

4.0 ± 0.5 mm (0.157 ± 0.020 in.)

- (b) Coat the lip of the oil seal with MP grease.

**20. INSTALL FRONT DIFFERENTIAL CASE OIL SEAL**

- (a) Using SST and a hammer, drive in a new oil seal.

SST 09950-60010 (09951-00390), 09950-70010
(09951-07200)

Oil seal drive in depth:

0 ± 0.5 mm (0 ± 0.020 in.)

- (b) Coat the lip of the oil seal with MP grease.

21. INSTALL TRANSFER ASSY (See page 31-11)

22. INSTALL FRONT DRIVE SHAFT ASSY RH (See page 30-15)

23. INSTALL ENGINE ASSEMBLY WITH TRANSAXLE (See page 14-30)