

# AUTOMATIC TRANSAXLE FLUID (ATM) ON-VEHICLE INSPECTION


400MN-01

## 1. CHECK THE FLUID LEVEL

### HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

**Fluid temperature: 70 – 80 °C (158 – 176 °F)**

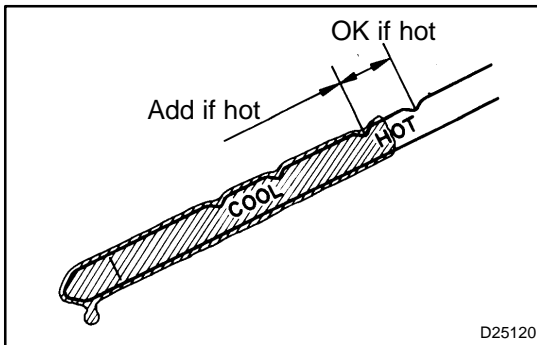

- Park the vehicle on a level surface and set the parking brake.
- With the engine idling and the brake pedal depressed, shift the shift lever into all ranges from P to L position and return to P position.
- Pull out the dipstick and wipe it clean.
- Push it back fully into the pipe.
- Pull it out and check that the fluid level is in the HOT position.

If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs or other parts.