

## REPLACEMENT

### 1. REMOVE CLUTCH START SWITCH ASSY

- (a) Disconnect the clutch start switch assy connector.
- (b) Remove the nut and clutch start switch assy from the clutch pedal support.

### 2. INSTALL CLUTCH START SWITCH ASSY

- (a) Install the clutch start switch assy with the nut.

**Torque: 15.68 N·m (160 kgf·cm, 12 ft·lbf)**

- (b) Connect the clutch start switch assy connector.

### 3. INSPECT CLUTCH START SWITCH ASSY (See page [42-22](#))