


REPLACEMENT

HINT:

COMPONENTS: See page 60-12

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)

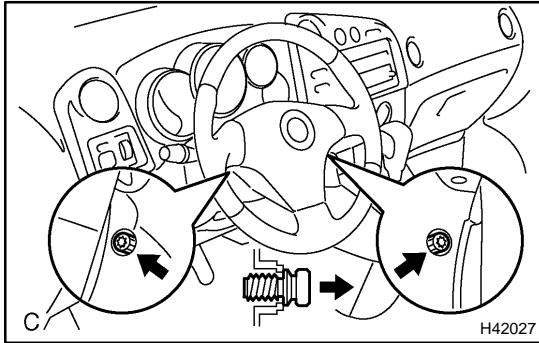


3. REMOVE HORN BUTTON ASSY

NOTICE:

If the airbag connector is disconnected with the ignition switch at ON or ACC, DTCs will be recorded.

- (a) Place the front wheels facing straight ahead.
- (b) Using a torx socket wrench (T30), loosen the 2 torx screws until the groove along the screw circumference catches on the screw case.
- (c) Pull out the horn button assy from the steering wheel assy.
- (d) Disconnect the airbag connectors and horn connector, and remove the horn button assy.

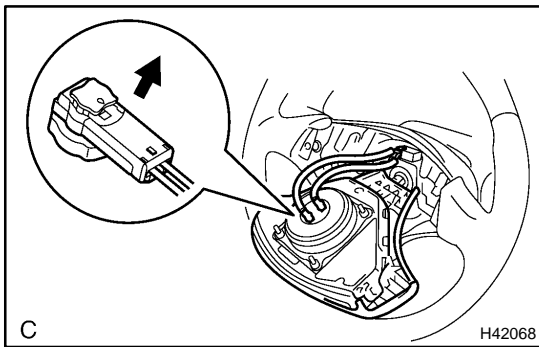

4. INSPECT HORN BUTTON ASSY (See page 60-8)

5. INSTALL HORN BUTTON ASSY

- (a) Connect the airbag connectors and horn connector.
- (b) Install the horn button assy after confirming that the circumference groove of the torx screws is caught on the screw case.
- (c) Using a torx socket wrench(T30), install the 2 screws.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

6. INSPECT SRS WARNING LIGHT (See page 05-543)