


## REPLACEMENT

HINT:

COMPONENTS: See page 60-38

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER**
4. **REMOVE HEATER CONTROL KNOB**
5. **REMOVE INSTRUMENT CLUSTER FINISH PANEL**
6. **REMOVE INSTRUMENT PANEL BOX**
7. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER**

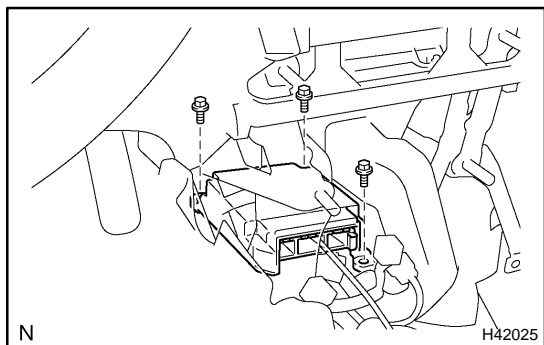

8. **REMOVE AIR BAG SENSOR ASSY CENTER**
  - (a) Disconnect the airbag sensor connectors.

**NOTICE:**

**Remove the connector with the sensor assy installed.**

- (b) Remove the 3 bolts and the airbag sensor assy center.

9. **INSPECT AIR BAG SENSOR ASSY CENTER** (See page 60-8)
10. **INSTALL AIR BAG SENSOR ASSY CENTER**
  - (a) Check that the ignition switch turn OFF.
  - (b) Check that the battery negative (-) terminal is disconnected.

**NOTICE:**

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Temporarily install the air bag sensor assy center with the 3 bolts.
- (d) Tighten the 3 bolts to the specified torque.  
**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**
- (e) Connect the connectors to the air bag sensor assy center.
- (f) Check that no play is identified.
- (g) Check that the water-proof sheet is properly set.

11. **INSPECT SRS WARNING LIGHT** (See Page 05-543)