


REPLACEMENT

HINT:

COMPONENTS: See page 60-44

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE FRONT DOOR SCUFF PLATE RH** (See page 76-17)
4. **REMOVE REAR DOOR SCUFF PLATE RH** (See page 76-17)
5. **REMOVE FRONT DOOR OPENING TRIM RH** (See page 76-17)
6. **REMOVE REAR DOOR OPENING TRIM RH** (See page 76-17)
7. **REMOVE CENTER PILLAR GARNISH LOWER RH** (See page 76-17)
8. **SEPARATE FRONT SEAT OUTER BELT ASSY RH** (See page 61-6)

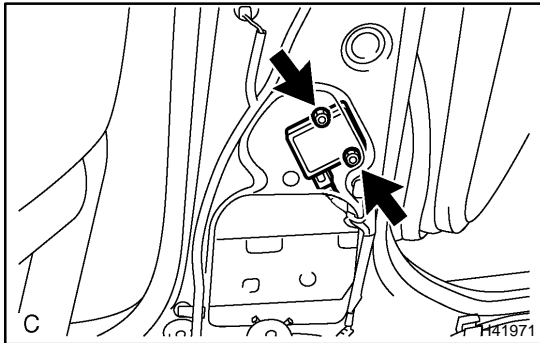

9. **REMOVE SIDE AIR BAG SENSOR ASSY RH**
 - (a) Disconnect the connector from the side airbag sensor assy RH.
 - (b) Remove the 2 nuts and side airbag sensor assy RH.

10. **INSPECT SIDE AIR BAG SENSOR ASSY RH** (See page 60-8)
11. **INSTALL SIDE AIR BAG SENSOR ASSY RH**
 - (a) Install the 2 nuts and side airbag sensor assy RH.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
 - (b) Connect the side airbag sensor connector.

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.
 - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
 - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installation, shake the sensor assembly to check that there is no looseness.
12. **INSTALL FRONT SEAT OUTER BELT ASSY RH**
Torque:
Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)
Lower bolt: 41 N·m (420 kgf·cm, 30 ft·lbf)
 13. **INSPECT SRS WARNING LIGHT** (See page 05-543)