


REPLACEMENT

HINT:

COMPONENTS: See page 60-46

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE FRONT SEAT TRACK COVER LH REAR INNER**
4. **REMOVE FRONT SEAT TRACK COVER LH REAR OUTER**
5. **REMOVE FRONT SEAT ASSY LH** (See page 72-2)

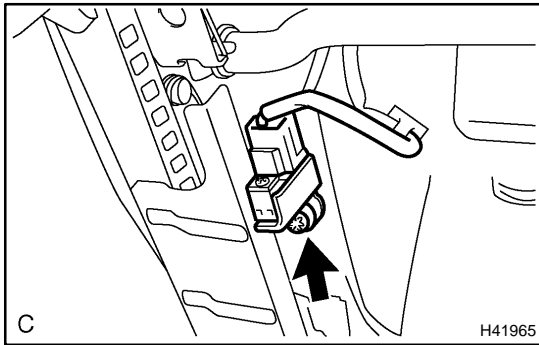

6. REMOVE SEAT POSITION AIR BAG SENSOR

- (a) Disconnect the connector of the seat position air bag sensor.
- (b) Using a torx socket wrench (T30), remove the torx screw and seat position air bag sensor.

7. INSPECT SEAT POSITION AIR BAG SENSOR

 (See page 60-8)

8. INSTALL SEAT POSITION AIR BAG SENSOR

- (a) Using a torx socket wrench (T30), install the seat position air bag sensor with the torx screw.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (b) Connect the connector of the seat position air bag sensor.

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.
 - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
 - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installation, shake the sensor assembly to check that there is no looseness.
9. **INSTALL FRONT SEAT ASSY LH**
Torque: 47 N·m (480 kgf·cm, 35 ft·lbf)
 10. **INSPECT SRS WARNING LIGHT** (See page 05-543)