


REPLACEMENT

HINT:

COMPONENTS: See page 60-40

1. **PRECAUTION (See page 60-1)**
2. **SEPARATE BATTERY NEGATIVE TERMINAL (See page 60-1)**

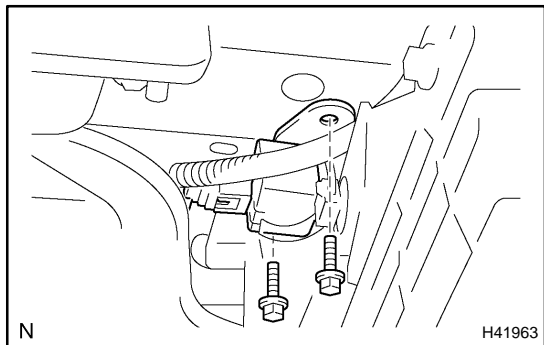

3. **REMOVE AIR BAG SENSOR FRONT LH**
 - (a) Disconnect the connector from the airbag sensor front LH.
 - (b) Remove the 2 bolts and airbag sensor front LH.

4. **INSPECT AIR BAG SENSOR FRONT LH (See page 60-8)**
5. **INSTALL AIR BAG SENSOR FRONT LH**
 - (a) Check that the ignition switch turn OFF.
 - (b) Check that the battery negative (-) terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the airbag sensor front LH with the 2 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (d) Connect the connector to the front airbag sensor front LH.
- (e) Check that no play is identified.
6. **INSPECT SRS WARNING LIGHT (See page 05-543)**