

## PROBLEM SYMPTOMS TABLE

### HINT:

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

### 1. HEADLAMP AND TAIL LAMP

Symptom	Suspect Area	See page
Low beam does not come on (One side).	1. Bulb 2. HEAD RH LWR fuse or HEAD LH LWR fuse 3. Wire harness	– – –
Low beam does not come on (All).	1. Headlamp dimmer switch 2. Daytime running light relay 3. Wire harness	65-7 65-7 –
High beam does not come on (One side).	1. Bulb 2. HEAD RH UPR fuse or HEAD LH UPR fuse 3. Wire harness	– – –
High beam does not come on (All).	1. DIMMER relay 2. Headlamp dimmer switch 3. Daytime running light relay 4. Wire harness	– 65-7 65-4 –
"Flash" does not operate (All).	1. Headlamp dimmer switch 2. Wire harness	65-7 –
Headlamp is dark.	1. Bulb 2. Wire harness	– –
Only one tail lamp comes on.	1. Bulb 2. Wire harness	– –
Both tail lamps do not come on (Headlamps are normal).	1. TAIL fuse 2. TAIL relay (USA only) 3. Light control switch 4. Daytime running light relay (USA only) 5. Wire harness	– 65-7 65-7 65-4 –
Both tail lamps do not come on (Headlamps do not come on).	1. Light control switch 2. Wire harness	65-7 –
Headlamp does not come on with engine running and light control switch OFF.	1. HEAD relay 2. Generator 3. Parking brake switch 4. Daytime running light relay 5. Wire harness	65-7 – – 65-4 –

### 2. FRONT FOG LAMP

Symptom	Suspect Area	See page
Front fog lamps do not come on with light control switch in the HEAD position (Headlamps are normal).	1. FOG fuse 2. FOG relay 3. Front fog lamp switch 4. Wire harness	– 65-7 65-7 –
Only one front fog lamp does not come on.	1. Bulb 2. Wire harness	– –

**3. TURN SIGNAL AND HAZARD WARNING**

Symptom	Suspect Area	See page
"Hazard" and "Turn" do not come on.	1. HAZARD fuse 2. Turn signal flasher relay 3. Wire harness	- 65-4 -
Hazard warning lamp does not come on. (Turn is normal)	1. Hazard warning signal switch assy 2. Wire harness	65-7 -
Turn signal does not come on. (Hazard is normal)	1. Turn signal switch 2. Wire harness	65-4 -
Turn signal does not come on in one direction.	1. Turn signal switch 2. Wire harness	65-4 -
Only one bulb does not come on.	1. Bulb 2. Wire harness	- -

**4. STOP LAMP**

Symptom	Suspect Area	See page
Both stop lamps do not come on.	1. STOP fuse 2. Stop lamp switch 3. Wire harness	- 65-7 -
Stop lamp always remains ON.	1. Stop lamp switch 2. Wire harness	65-7 -
Stop lamp does not come on (One side).	1. Bulb 2. Wire harness	- -

**5. BACK UP LAMP**

Symptom	Suspect Area	See page
Both back up lamps do not come on.	1. GAUGE fuse 2. Back up lamp switch (M/T) or Park/Neutral Position SW (A/T) 3. Wire harness	- 65-7 or 05-410 -
Both back up lamps always remain ON.	1. Back up lamp switch (M/T) or Park/Neutral Position SW (A/T) 2. Wire harness	65-7 or 05-410 -
Back up lamp does not come on (One side).	1. Bulb 2. Wire harness	- -

**6. ROOM LAMP**

Symptom	Suspect Area	See page
Room lamp assy No. 1 does not come on.	1. Bulb 2. Wire harness	- -