


REPLACEMENT


HINT:

COMPONENTS: See page 65-12

1. REMOVE FRONT BUMPER COVER(See page 76-2)
2. REMOVE LH HEADLAMP ASSY

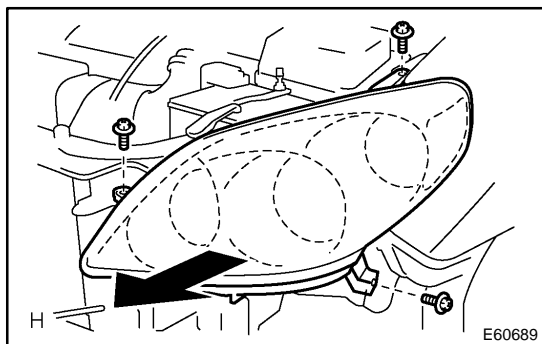

- (a) Remove the 3 bolts.
- (b) Pull out the headlight assy LH forward, then disconnect the bracket of body side.

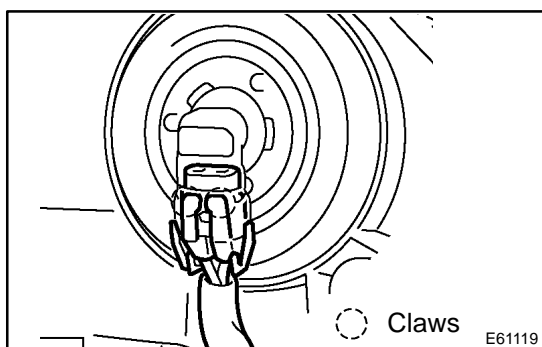

- (c) Release the 2 claws and disconnect the connectors as shown in the illustration, and remove the headlight assy LH.

3. PUT VEHICLE THESE CONDITIONS(See page 65-17)
4. ADJUST FOG LIGHT AIM(See page 65-17)
5. HEADLIGHT AIM ONLY(See page 65-14)