


FOG LAMP ASSY LH REPLACEMENT

650HA-01

1. REMOVE FRONT BUMPER COVER(See page 76-2)

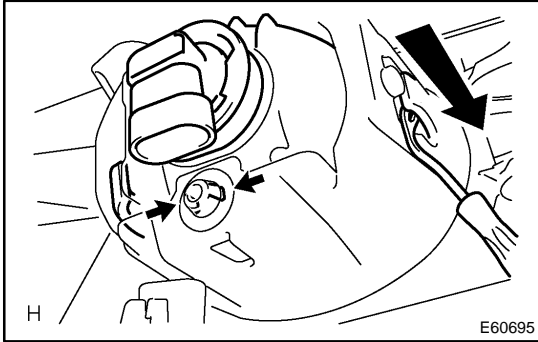

2. REMOVE FOG LAMP ASSY LH

- (a) Disconnect the connector.
- (b) Using a clipremover, release the 2 claws.
- (c) Press the 2 claws and release the 2claws, and remove the foglight assy LH.

3. PUT VEHICLE THESE CONDITIONS(See page 65-17)
4. ADJUST FOG LIGHT AIM(See page 65-17)
5. CHECK FOG LIGHT AIM(See page 65-17)