



REAR COMBINATION LAMP ASSY LH REPLACEMENT

650HC-01

1. REMOVE REAR COMBINATION LAMP ASSY LH

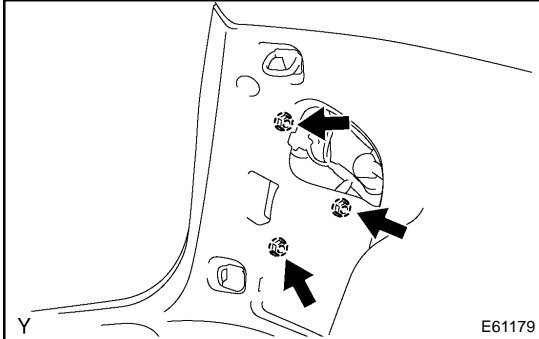

- (a) Remove the service hole cover LH.
- (b) Disconnect the connector and remove the 3 nuts.

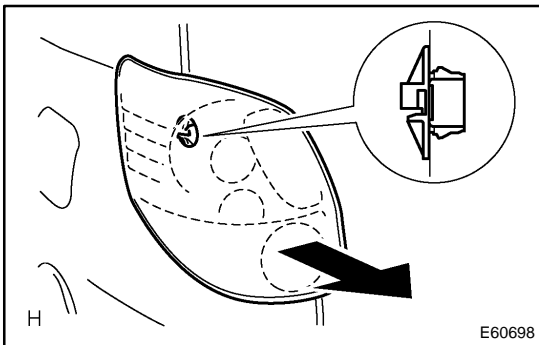

- (c) Pull out the rear combination light assy LH to the back of the vehicle, and remove.