
CENTER STOP LAMP ASSY REPLACEMENT

650HF_0

1. REMOVE CENTER STOP LAMP ASSY

(a) Remove the 2 clips and center stop light cover.

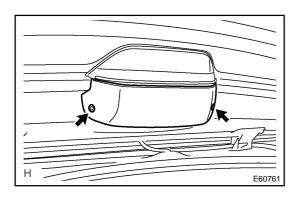

- (b) Remove the 2 bolts.
- (c) Disconnect the connector and remove the center stop light assy.

Author: Date: 2445