


INSPECTION

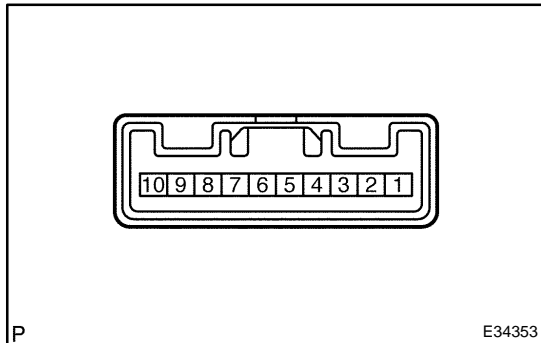

1. WINDSHIELD WIPER SWITCH ASSY

(a) Continuity Check

- (1) Check the continuity of each terminal of the connector.

Standard:

Front Wiper Switch

Switch position	Tester connection	Specified condition
MIST	7 (+1) - 8 (+B)	Continuity
OFF	6 (+S) - 7 (+1)	Continuity
INT	6 (+S) - 7 (+1)	Continuity
LO	7 (+1) - 8 (+B)	Continuity
HI	8 (+B) - 9 (+2)	Continuity


Front Washer Switch

Switch position	Tester connection	Specified condition
OFF	4 (W) - 5 (EW)	No continuity
ON	4 (W) - 5 (EW)	Continuity



(b) w/o Intermittent time adjust:

Intermittent Operation Check

- (1) Connect the voltmeter (+) terminal to terminal 7 (+1) of the connector, the voltmeter (-) terminal to terminal 5 (EW) of the connector.
- (2) Connect the battery (+) to terminal 8 (+B) of the connector, the battery (-) to terminal 5 (EW) and 6 (+S) of the connector.
- (3) Turn the wiper switch to the INT position.
- (4) Connect the battery (+) to terminal 6 (+S) of the connector for 5 seconds.
- (5) Connect the battery (-) to terminal 6 (+S) of the connector. Operate the intermittent wiper relay and check voltage between terminal 7 (+1) and terminal 5 (EW).

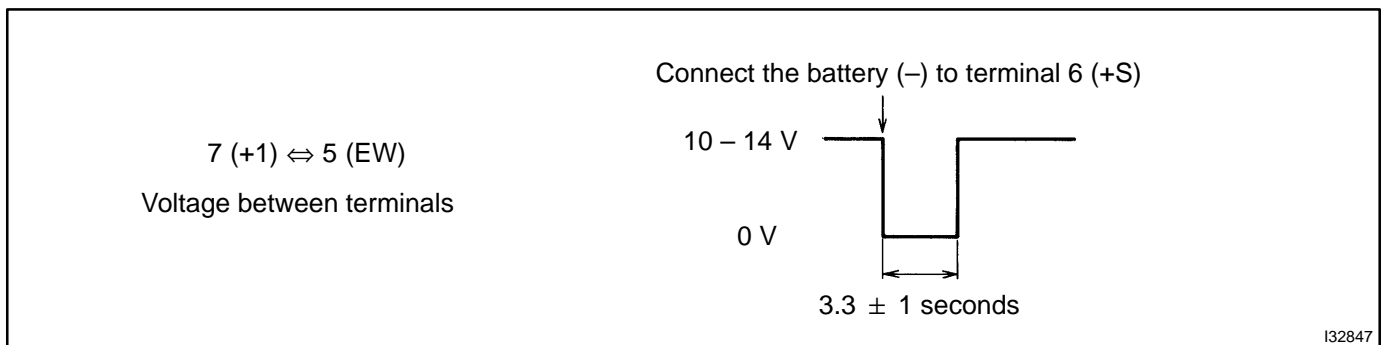


- (c) w/ Intermittent time adjust:
Intermittent Operation Check
- (1) Connect the voltmeter (+) terminal to terminal 7 (+1) of the connector, the voltmeter (-) terminal to terminal 5 (EW) of the connector.
 - (2) Connect the battery (+) to terminal 8 (+B) of the connector, the battery (-) to terminal 5 (EW) and 6 (+S) of the connector.
 - (3) Turn the wiper switch to the INT position.
 - (4) Connect the battery (+) to terminal 6 (+S) of the connector for 5 seconds.
 - (5) Connect the battery (-) to terminal 6 (+S) of the connector. Operate the intermittent wiper relay and check voltage between terminal 7 (+1) and terminal 5 (EW).

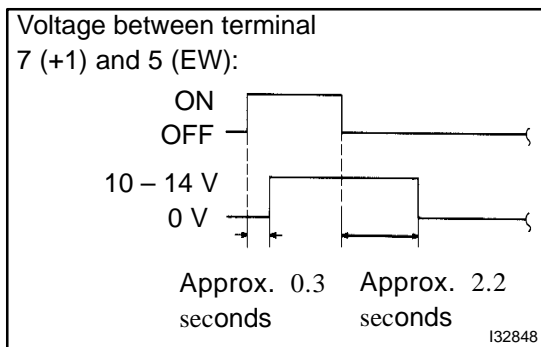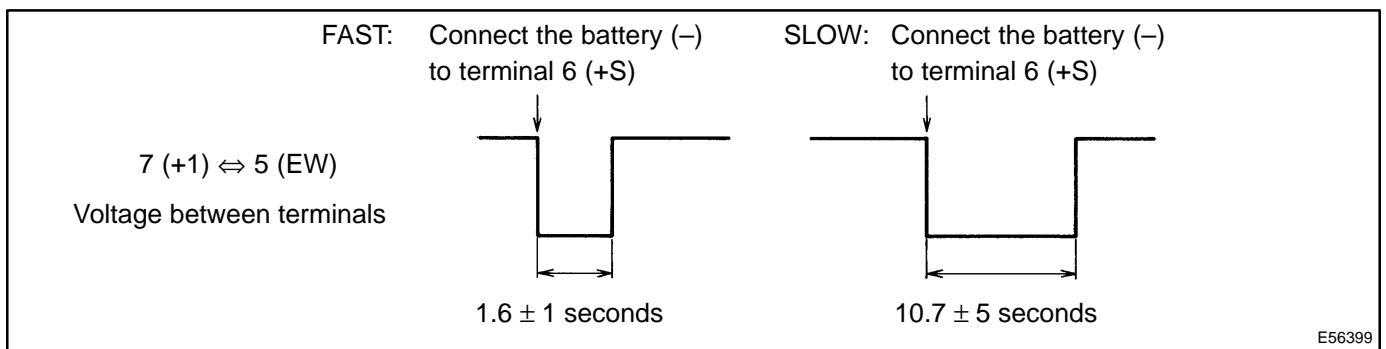

- (d) Operation Check (Front Wiper)
- (1) Turn the wiper switch to the OFF position.
 - (2) Connect the battery (+) to terminal 8 (+B) of the connector, the battery (-) to terminal 6 (+S) and 5 (EW) of the connector.
 - (3) Connect the voltmeter (+) terminal to terminal 7 (+1) of the connector, the voltmeter (-) terminal to terminal 5 (EW) of the connector. Turn the washer switch to ON and OFF and check voltage between terminal 7 (+1) and terminal 5 (EW).

2. WINDSHIELD WIPER MOTOR ASSY


- (a) LO Operation Check
- (1) Connect the battery (+) to terminal 1 (+1) of the connector, the battery (-) to terminal 5 (E) of the connector, and check that the motor operates at low speed (LO).
- (b) HI Operation Check
- (1) Connect the battery (+) to terminal 4 (+2) of the connector, the battery (-) to terminal 5 (E) of the connector, and check that the motor operates at high speed (HI).

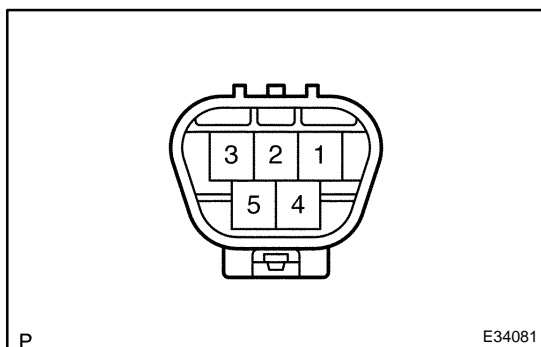


(c) Automatic Stop Operation Check

- (1) Connect the battery (+) to terminal 1 (+1) of the connector, the battery (-) to terminal 5 (E) of the connector. With the motor being rotated at low speed (LO), disconnect terminal 1 (+1) to stop the wiper motor operation at any position except the automatic stop position.
- (2) Using SST, connect terminal 1 (+1) and 3 (S), and the battery (+) to terminal 2 (B) to restart the motor operation at low speed (LO).

SST 09843-18040

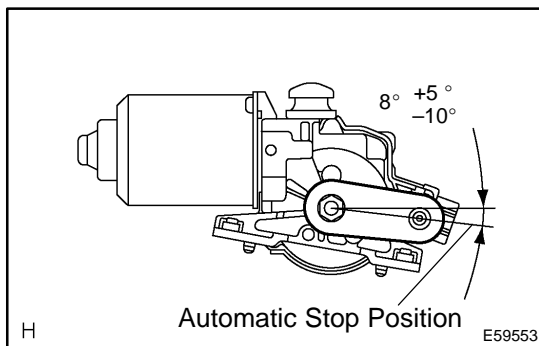

- (3) Check the automatic stop position.

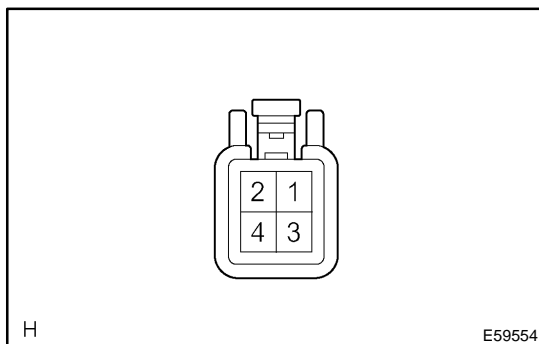Standard: See the illustration.**3. REAR WIPER MOTOR ASSY**

(a) Operation Check

- (1) Connect the battery (+) to terminal 4 (+1) of the connector, the battery (-) to terminal 1 (-) of the connector, and check that the rear wiper motor operates.

(b) Automatic Stop Position Operation Check

- (1) Connect the battery (+) to terminal 2 (+B) of the connector, the battery (-) to terminal 3 (S) of the connector. With the motor being rotated, disconnect terminal 4 (+1) to stop the motor operation at any position except the automatic stop position.
- (2) Connect the battery (+) to terminal 2 (+B) to restart the motor operation, then check that the wiper arm blade stops automatically at a certain position. (See page 66-11)