


ON-VEHICLE INSPECTION

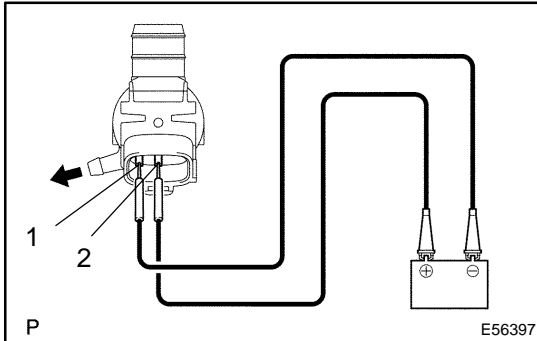

1. WASHER MOTOR

(a) Operation Check

- (1) Pour the water into the washer jar with the windshield washer motor and pump assembly installed to the washer jar assembly.
- (2) Connect the battery (+) to terminal 2 of the windshield washer motor and pump assembly, the battery (-) to terminal 1 of the windshield washer motor and pump assembly. Check that the water comes out from the washer jar.