


FRONT NO.2 SPEAKER ASSY REPLACEMENT

670ER-01

HINT:

COMPONENTS: See page 67-2

1. REMOVE FRONT DOOR PULL HANDLE LH (See page 75-5)
2. REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (W/ POWER WINDOW)
(See page 75-5)
3. REMOVE FRONT ARMREST BASE PANEL UPPER LH (W/O POWER WINDOW)
(See page 75-5)
4. REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSY (W/O POWER WINDOW)
(See page 75-5)
5. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (See page 75-5)

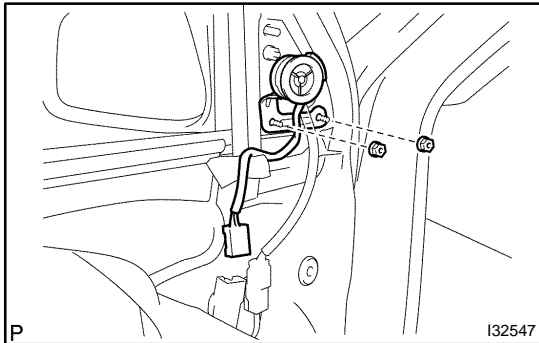

6. REMOVE FRONT NO.2 SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 nuts and front No.2 speaker assy from the front door panel.

7. INSTALL FRONT NO.2 SPEAKER ASSY

- (a) Install the front No.2 speaker assy with the 2 nuts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (b) Connect the connector.