

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Rear window defogger does not operate (Indicator light on)	2. M-HTR/DEF IUP fuse 3. DEF fuse 4. DEF relay 5. Rear window defogger wire 6. Wire harness	- ② 68-1 ② -
Rear window defogger does not operate (Indicator light off)	1. GAUGE fuse 2. Defogger switch 3. Air control assembly 4. Wire harness	② 70-26 - ②