

PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page
Power window does not operate (ALL) (Power door lock does not operate)	7. P/W relay 8. POWER fuse 9. AM1 fuse 10. GAUGE fuse 11. Wire harness	70-4 68-1 68-1 68-1 -
Power window does not operate (ALL) (Power door lock is normal)	1. Ignition switch 2. Power window regulator master switch 3. Wire harness 4. Power window motor	80-2 70-4 - 70-4
"One-Touch Power Window System" does not operate	1. Power window regulator master switch 2. Power window motor	70-4 70-4
Only one window glass does not move	1. Power window regulator master switch 2. Power window regulator switch 3. Power window motor 4. Wire harness	70-4 70-4 70-4 -
"Window Lock System" does not operate	1. Power window regulator master switch	70-4