

OUTER REAR VIEW MIRROR ASSY LH

REPLACEMENT

700HO-01

HINT:

- Installation is in the reverse order of the removal.
 - In the RH side, work in the same procedure as in the LH side.
1. **REMOVE FRONT DOOR PULL HANDLE LH (See page 75-5)**
 2. **REMOVE POWER WINDOW REGULATOR MASTER SWITCH ASSY (W/ POWER WINDOW)
(See page 75-5)**
 3. **REMOVE FRONT ARMREST BASE PANEL UPPER LH (W/O POWER WINDOW)
(See page 75-5)**
 4. **REMOVE FRONT DOOR WINDOW REGULATOR HANDLE ASSY (W/O POWER WINDOW)
(See page 75-5)**
 5. **REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page 75-5)**
 6. **REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH (See page 75-5)**
 7. **REMOVE OUTER REAR VIEW MIRROR ASSY LH**
 - (a) Remove the 3 nuts and the rear view mirror assembly LH, and then disconnect the connector.
 8. **INSTALL OUTER REAR VIEW MIRROR ASSY LH**
Torque: 8.0 N·m (81 kgf·cm, 71 in·lbf)