

# COMBINATION METER

## PROBLEM SYMPTOMS TABLE

7108U-01

### Warning Lights:

Symptom	Suspect Area	See page
Check Engine warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– – –
Discharge warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– – –
Brake warning light does not light up.	1. Wire Harness or Connector 2. Brake Actuator Assy 3. Combination Meter Assy	– <a href="#">05-316</a> –
ABS warning light does not light up.	1. Wire Harness or Connector 2. Brake Actuator Assy 3. Combination Meter Assy	– <a href="#">05-316</a> –
SRS warning light does not light up.	1. Wire Harness or Connector 2. Airbag Sensor Assy Center 3. Combination Meter Assy	– <a href="#">05-543</a> –
Open Door warning light does not light up.	1. Wire Harness or Connector 2. Courtesy Lamp Switch 3. Combination Meter Assy	– <a href="#">65-7</a> –
Fuel Level warning light does not light up.	1. Wire Harness or Connector 2. Fuel Sender Gage Assy 3. Combination Meter Assy	– <a href="#">05-831</a> –
Low Oil Pressure warning light does not light up.	1. Wire Harness or Connector 2. Oil Pressure Switch Assy 3. Combination Meter Assy	– <a href="#">71-2</a> –

### Indicator Lights:

Symptom	Suspect Area	See page
Turn indicator light does not light up.	1. Wire Harness or Connector 2. Turn Signal and Hazard Warning System 3. Combination Meter Assy	– <a href="#">65-7</a> –
High Beam indicator light does not light up.	1. Wire Harness or Connector 2. Headlight Dimmer Switch 3. Combination Meter Assy	– <a href="#">65-7</a> –
O/D OFF indicator light does not light up.	1. Wire Harness or Connector 2. O/D Main Switch Circuit 3. ECM 4. Combination Meter Assy	– <a href="#">05-371</a> – –