


INSPECTION

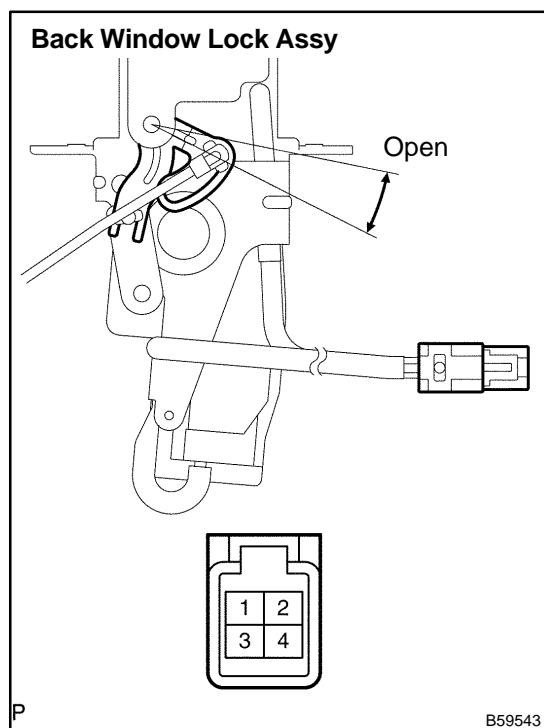

1. INSPECT BACK WINDOW LOCK ASSY

- (a) Apply battery voltage and inspect the window lock motor operation, as show in the illustration and table.

Standard:

Measuring condition	Specified condition
Battery positive (+) Terminal - 4 Battery negative (-) Terminal - 3	Open


If the result is not as specified, replace the window lock assy.

- (b) Inspect the courtesy switch.

Standard:

Terminal No.	Door lock latch position	Specified condition
1 ↔ 2	Open or half lock	Continuity
	Closed	No continuity

If the result is not as specified, replace the window lock assy.

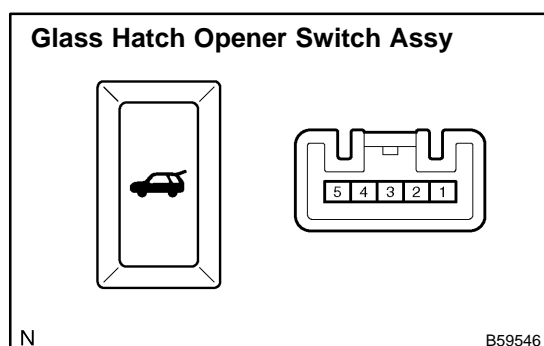

2. INSPECT GLASS HATCH OPENER SWITCH ASSY

- (a) Inspect the switch continuity, as show in the illustration and table.

Standard:

Terminal No.	Switch position	Specified condition
1 ↔ 3	Free	Continuity
2 ↔ 3	Push	

If the result is not as specified, replace the switch assy.