


GLASS HATCH OPENER SYSTEM


ON-VEHICLE INSPECTION

730BE-01

1. INSPECT GLASS HATCH OPENER SYSTEM (Switch operation)

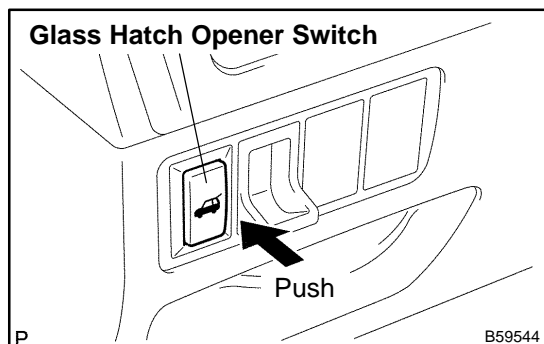

- (a) With the ignition switch ON, check that the glass hatch will open when the glass hatch opener switch is pushed.

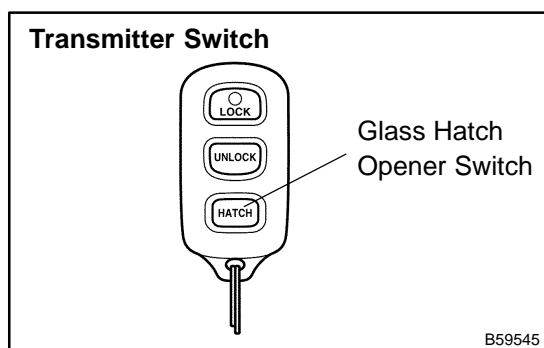


- (b) Check that the glass hatch will open when the glass hatch opener switch on the transmitter has been pushed for 0.8 seconds or more.

2. INSPECT GLASS HATCH OPENER SYSTEM (Key cylinder operation)

HINT:

The back door lock/unlock and glass hatch opener are linked together in the back door key cylinder. The back door can be locked or unlocked, and also the glass hatch can be opened in this key cylinder alone.

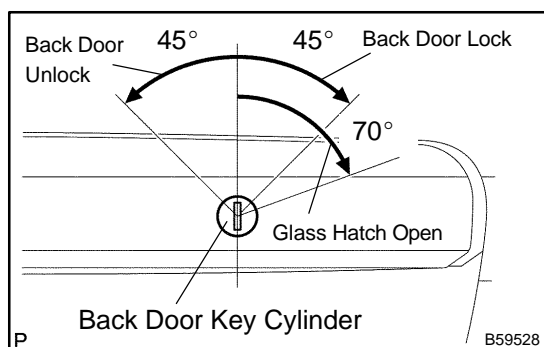

- (a) Check that the back door will lock when the key is turned clockwise by approximately 45° and the back door will unlock when turned fully counterclockwise by approximately 45°, as shown in the illustration.
- (b) Check that the glass hatch will open when the key is turned fully clockwise by approximately 70° farther than the back door lock position (approximately 45°), as shown in the illustration.

HINT:

The glass hatch opener can operate even while the back door is open.