

## PROBLEM SYMPTOMS TABLE

Symptom	Suspected Area	See page	
Sliding roof system dose not operate	5. P/W relay	-	
	6. GAUGE fuse	-	
	7. IG1 relay	-	
	8. Sliding roof switch	74-4	
	9. Sliding roof limit switch	74-4	
	10.Sliding roof drive gear	74-4	
	11.Faulty sliding of sliding roof	-	
	12.Wire harness	-	
	Sliding roof system stops operation halfway (Foreign material, such as a stone, is trapped in motor assembly)	1. Sliding roof switch	74-4
		2. Sliding roof limit switch	74-4
		3. Sliding roof drive gear	74-4
		4. IG1 relay	-
5. Wire harness		-	