


# HOOD ADJUSTMENT

750DL-01


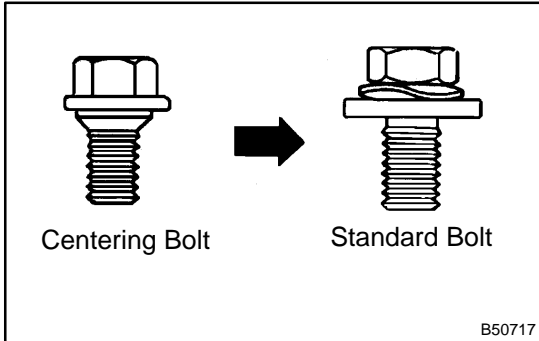


**HINT:**

Since the centering bolt is used as a hood hinge and hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.


**1. INSPECT HOOD SUB-ASSY**

- (a) Check that the clearance is within the standard value.

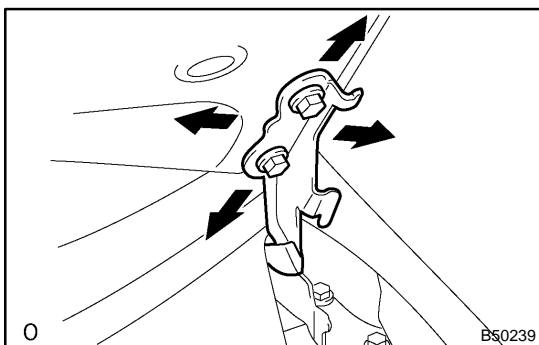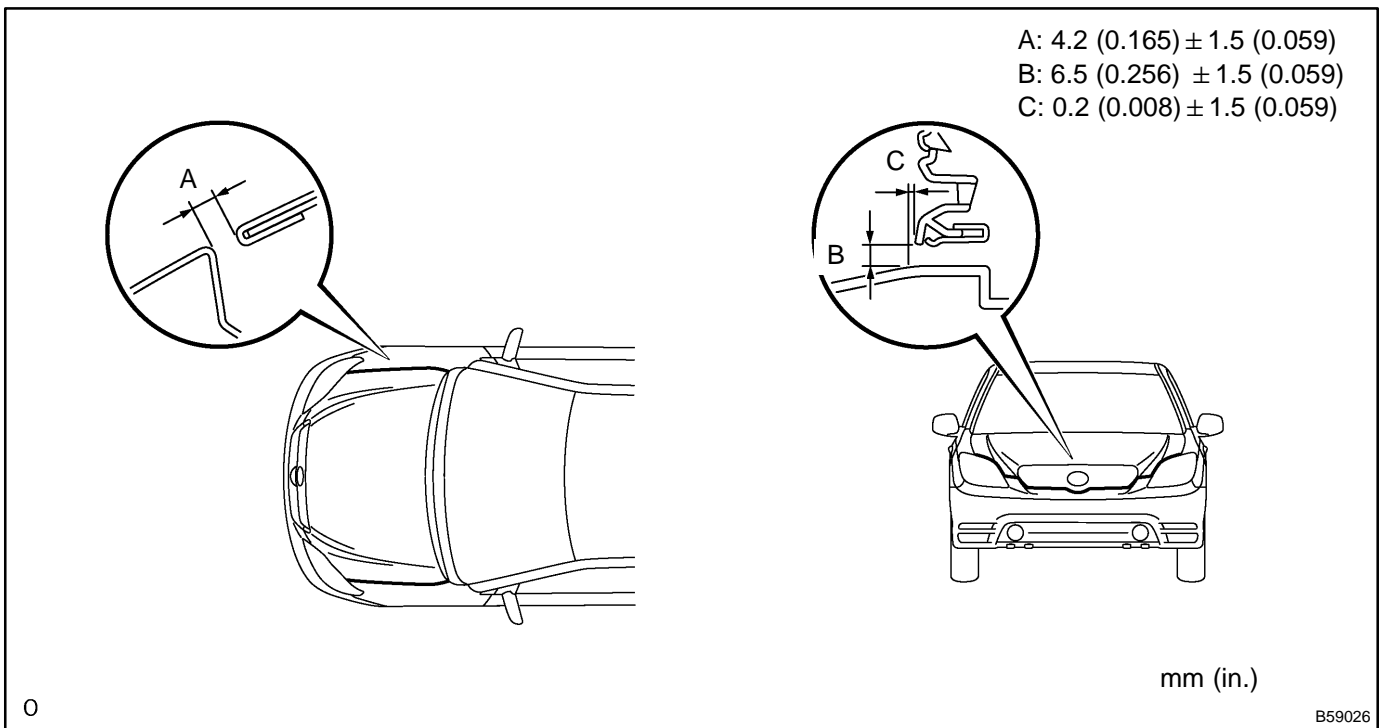


**2. ADJUST HOOD SUB-ASSY**

- (a) Adjust the hood by loosening the hood side hinge bolts.  
**Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)**

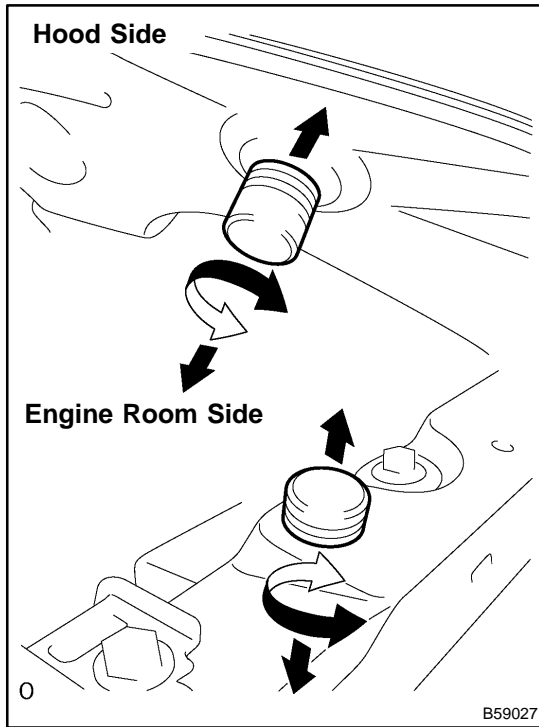

(b) Adjust the hood by turning the cushions.

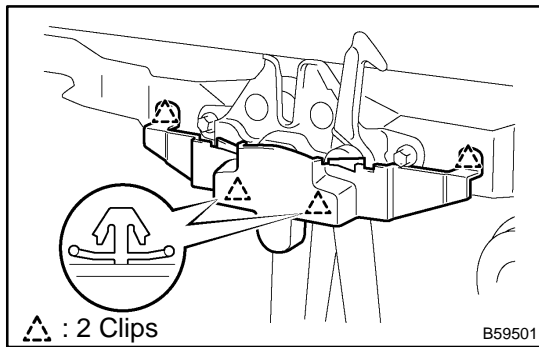


(c) Using a screwdriver, remove the hood lock release lever cover.

**HINT:**

Tape the screwdriver tip before use.

**NOTICE:**

Removing the protector damages the clips inside the protector, and therefore the use of a new protector is necessary on installation.

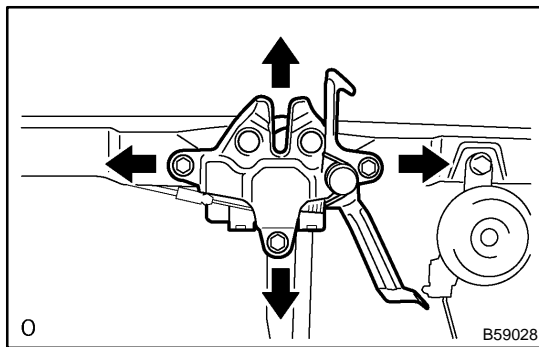

(d) Adjust the lock by loosening the bolts.