


# INSPECTION

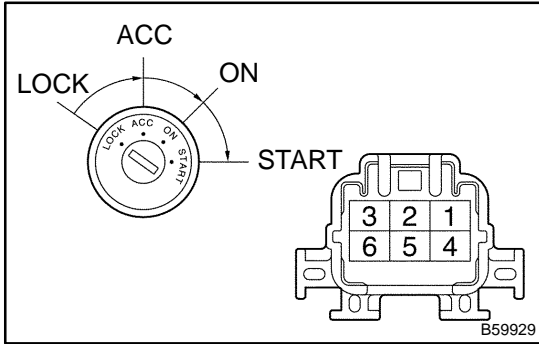

## 1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the ignition switch continuity.

### Standard:

Switch position	Terminal No.	Specified condition
LOCK	-	No continuity
ACC	1 ↔ 3	Continuity
ON	1 ↔ 2 ↔ 3 5 ↔ 6	Continuity
START	1 ↔ 2 4 ↔ 5 ↔ 6	Continuity

If the result is not as specified, replace the switch.