


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8002X-01

1. REMOVE STEERING COLUMN COVER (See page 50-8)

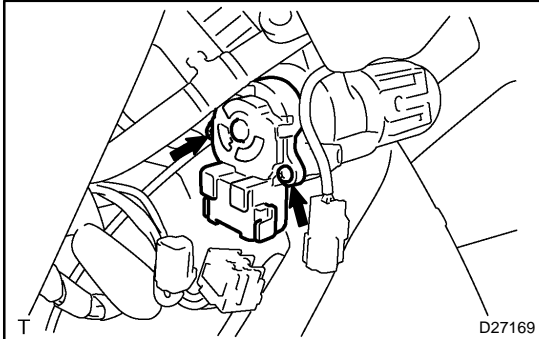

- ## 2. REMOVE IGNITION OR STARTER SWITCH ASSY
- (a) Disconnect the ignition switch connector and unlock warning switch connector.
 - (b) Remove the 2 clamps.
 - (c) Remove the 2 screws and ignition switch.