

CLUTCH SWITCH ASSY

REPLACEMENT

82027-01

1. REMOVE CLUTCH SWITCH ASSY

- (a) Disconnect the connector.
- (b) Loosen the nut and remove clutch the switch assy.