


CRUISE CONTROL SYSTEM


ON-VEHICLE INSPECTION

8202B-01

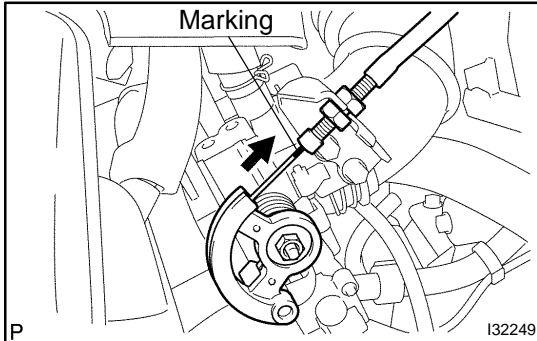


1. CHECK PLAY OF ACCELERATOR AUTO DRIVE CABLE ASSY (1ZZ-FE)

- (a) Push the wire into the cable so as not to move the throttle link and put a mark on the position shown in the illustration.

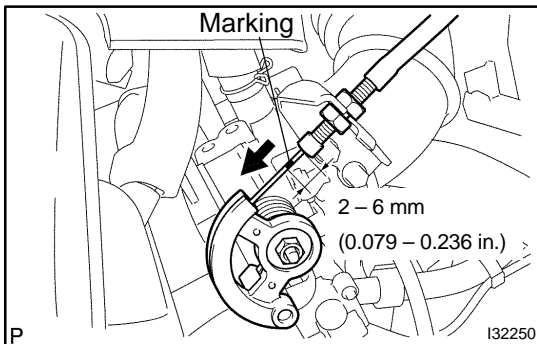


- (b) Pull the wire and check the moved distance of the mark.

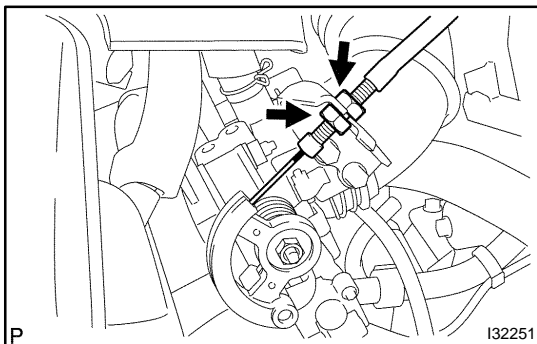

2. ADJUST PLAY IN ACCELERATOR AUTO DRIVE CABLE ASSY (1ZZ-FE)


- (a) Changing the double nut position shown by the arrows, adjust the play to the standard value.

Standard: 2 - 6 mm (0.079 - 0.236 in.)

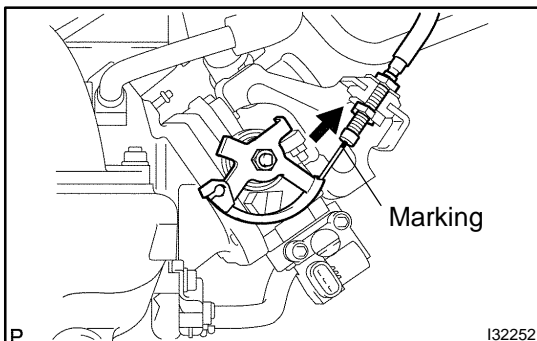


3. CHECK PLAY OF ACCELERATOR AUTO DRIVE CABLE ASSY (2ZZ-GE)

- (a) Push the wire into the cable so as not to move the throttle link and put a mark on the position shown in the illustration.

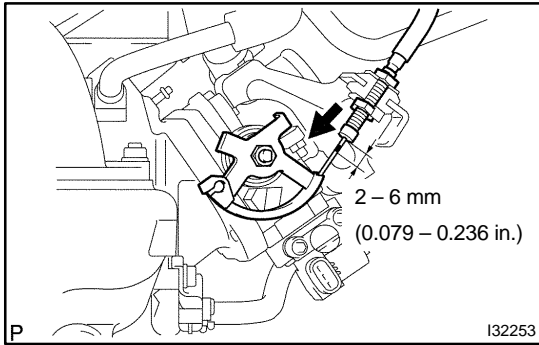


- (b) Pull the wire and check the moved distance of the mark.

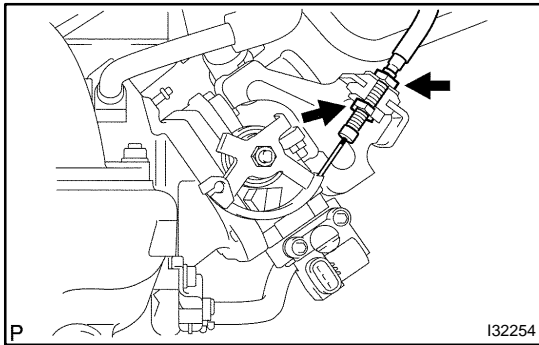

4. ADJUST PLAY IN ACCELERATOR AUTO DRIVE CABLE ASSY (2ZZ-GE)

- (a) Changing the double nut position shown by the arrows, adjust the play to the standard value.

Standard: 2 - 6 mm (0.079 - 0.236 in.)

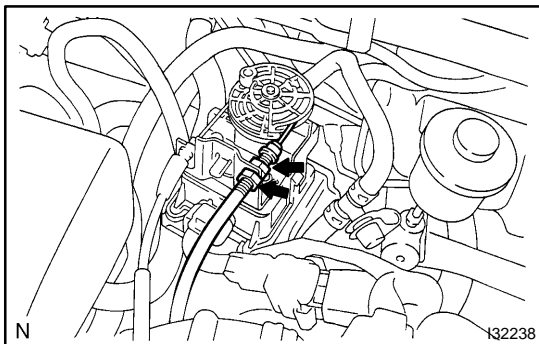

5. ADJUST PLAY IN ACCELERATOR CONTROL CABLE ASSY

- (a) Remove the cruise control actuator cover and adjust the play in the accelerator control cable assy by changing the double nut position.