


POWER POINT SOCKET ASSY REPLACEMENT

670EO-01

HINT:


COMPONENTS: See page 67-2

1. REMOVE FLOOR SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)
(See page 71-10)
2. REMOVE INSTRUMENT CLUSTER FINISH PANEL ASSY CTR (See page 71-10)
3. REMOVE CONSOLE BOX ASSY REAR (See page 33-4)

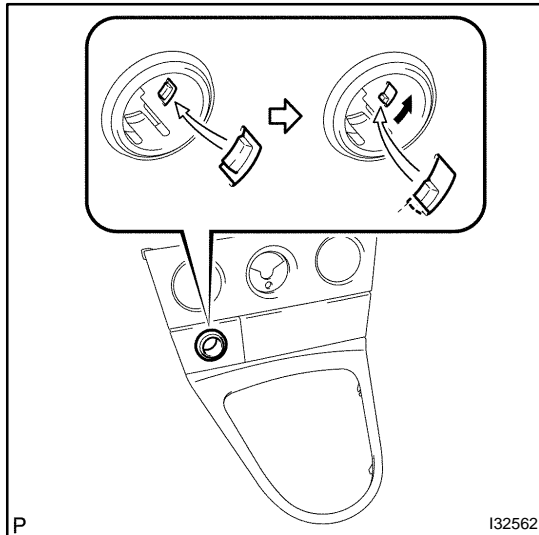

4. REMOVE POWER POINT SOCKET ASSY

- (a) Turn the socket in the circumference direction as shown in the illustration, disengage the claw between the socket and the power point socket cover, and push out the socket to the room side.
- (b) Align the socket with the notch on the power point socket cover, remove the power point socket assy to the room side.

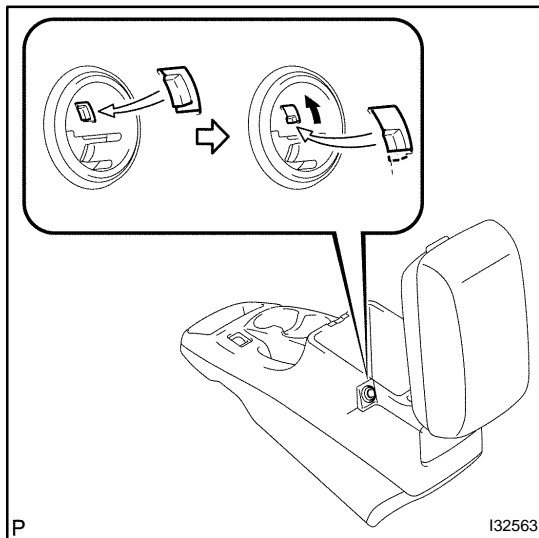

5. INSTALL POWER POINT SOCKET ASSY

- (a) Align the socket with the notch on the power point socket cover, push the power point socket assy into as hard as possible and install it.
6. INSTALL CONSOLE BOX ASSY REAR (See page 33-4)