FLOOR SHIFT ASSY (ATM)

400NA–01

COMPONENTS

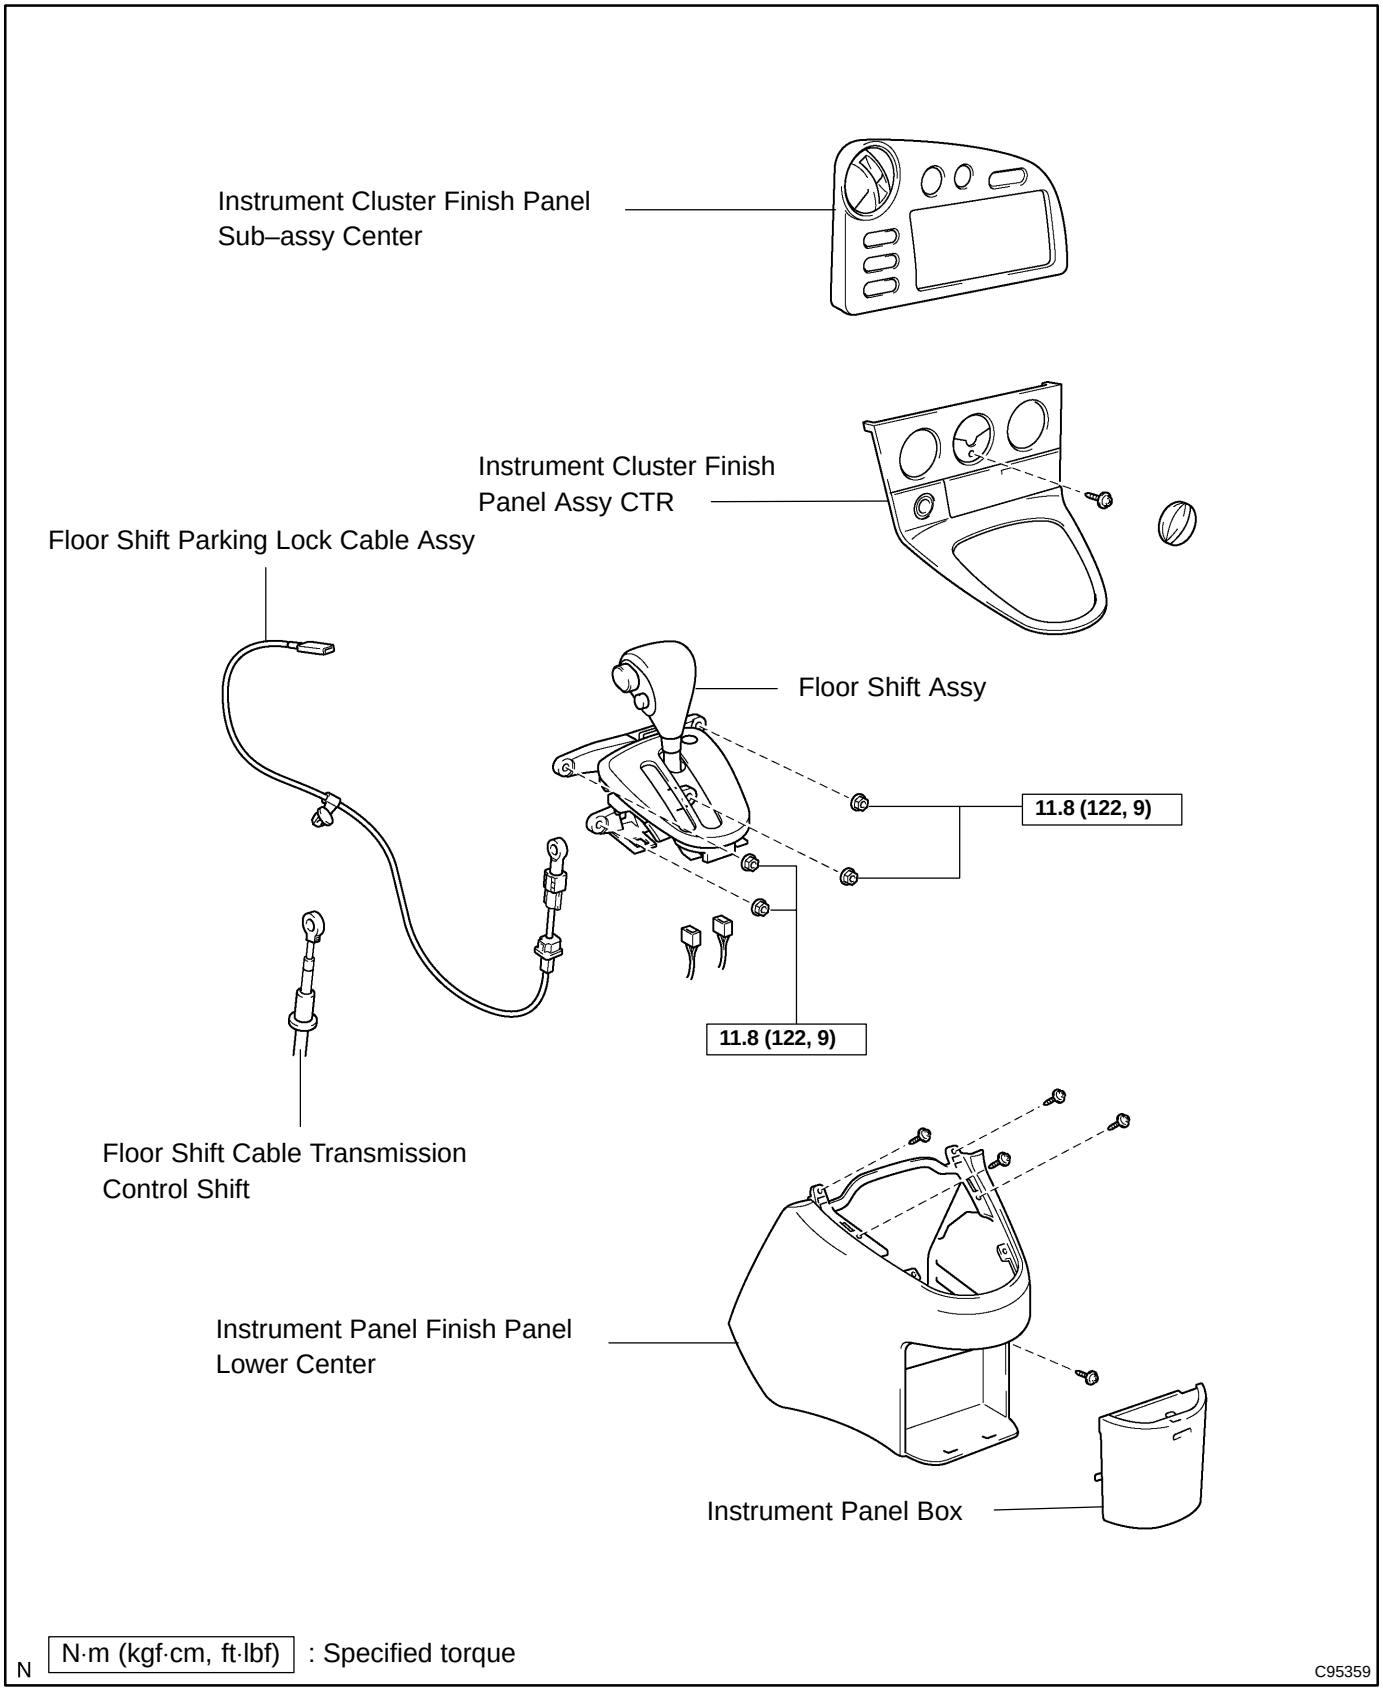

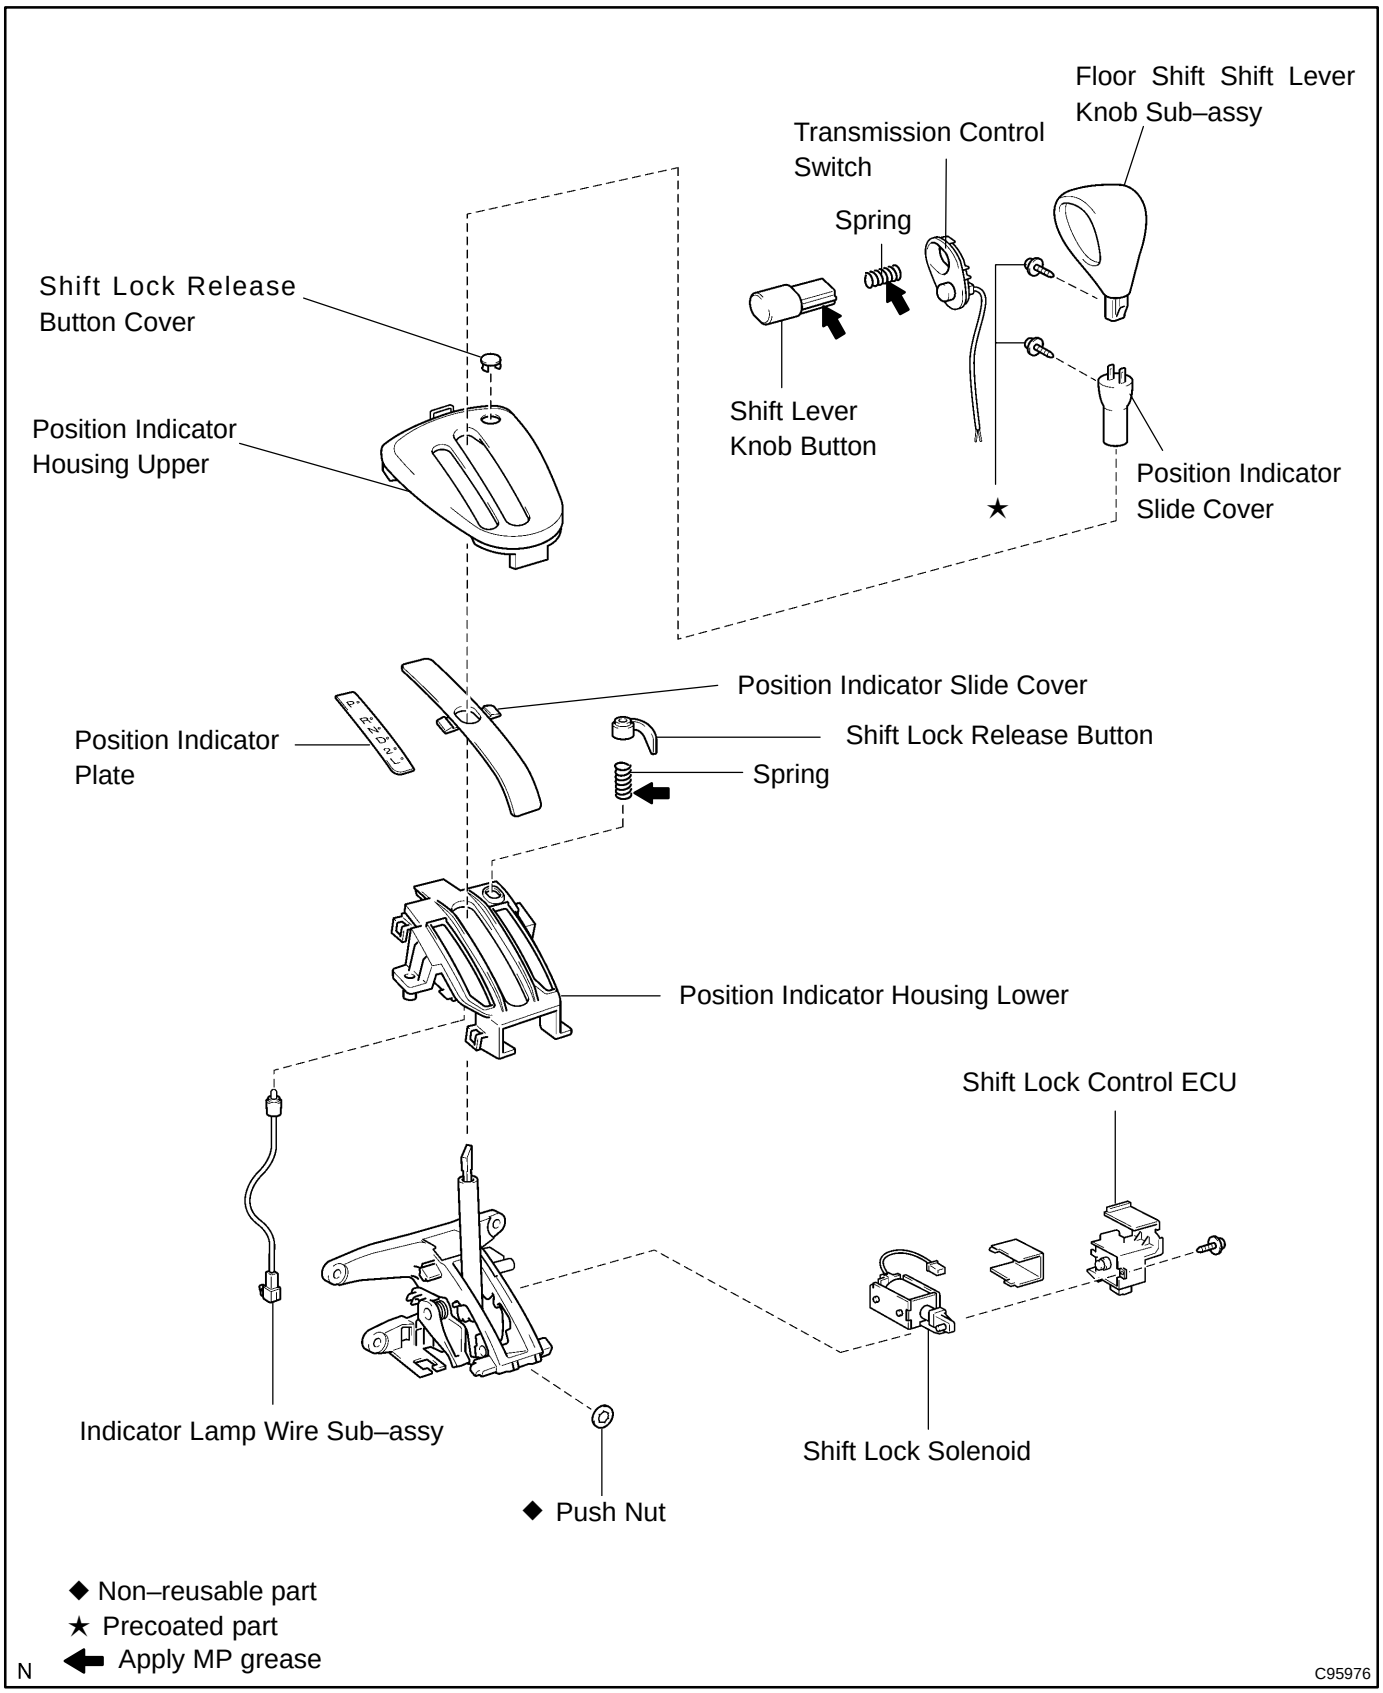
Floor Shift Shift Lever Knob Sub–assy
Transmission Control Switch
Spring
Shift Lock Release Button Cover
Shift Lever Knob Button
Position Indicator Housing Upper
Position Indicator Slide Cover
★
Position Indicator Slide Cover
Position Indicator Plate
Shift Lock Release Button
Spring
Position Indicator Housing Lower
Shift Lock Control ECU
Indicator Lamp Wire Sub–assy
Shift Lock Solenoid
◆ Push Nut
◆ Non–reusable part
★ Precoated part
Apply MP grease
N
C95976